

**HICKMAN**<sup>7</sup>  
EDGE SYSTEMS


# Roofers Edge Fascia

## Installation Guide for Roofers Edge Fascia

4 COMMERCE WAY, ARDEN, NC 28704 USA  
800-892-9173 828-676-1700  
HICKMANEDGESYSTEMS.COM


**HICKMAN**<sup>7</sup>  
EDGE SYSTEMS

## Installation Guide for Roofer's Edge Fascia

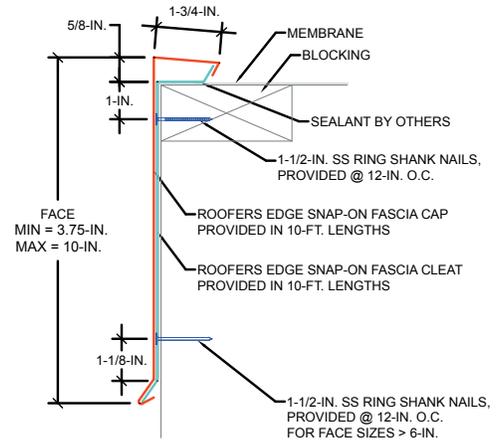

FOR MASONRY APPLICATIONS, PLEASE CONTACT HICKMAN.

CONTACT HICKMAN FOR APPROPRIATE RECOMMENDATIONS NEEDED TO MEET/EXCEED  
ANSI/SPRI/FM4435/ES-1 DESIGN CRITERIA

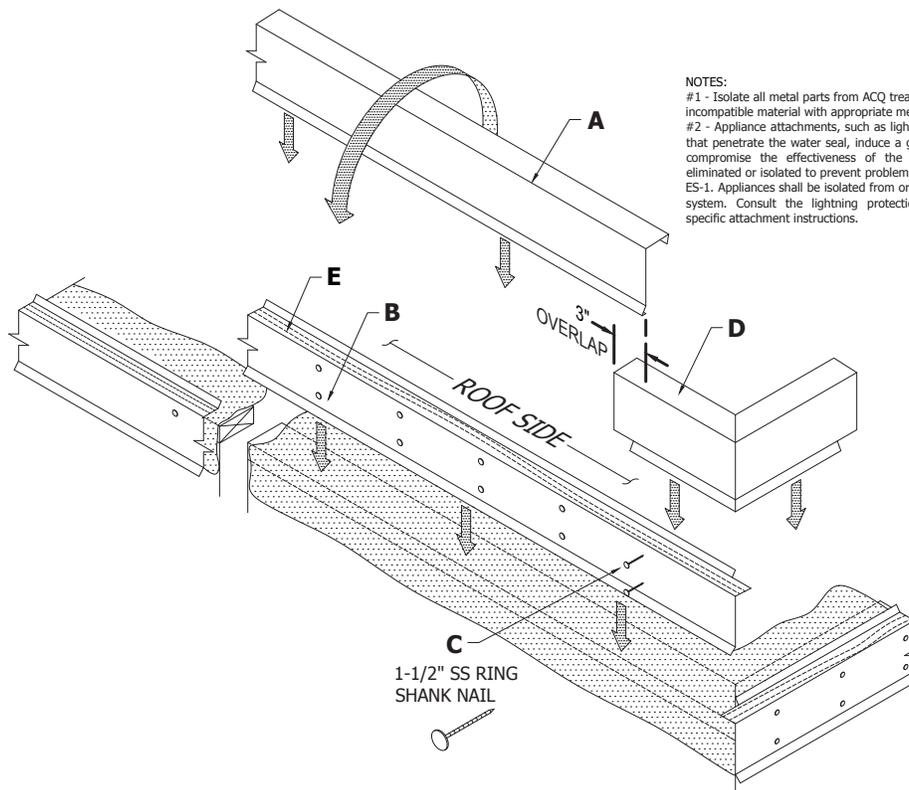


**A. Formed Fascia Cover**  
10'-0" Lengths

**B. Galvanized Steel Cleat**  
10'-0" Lengths

**C. 1-1/2" SS Ring Shank Nail**  
6" from ends @ 12" O.C.;  
1" down from edge  
1-1/8" above bottom bend (face sizes > 6")


**D. Fascia Miter Cover**  
Field cut and folded  
(Outside Corner Shown)

**E. Water-Cut Off Mastic**  
(By Installer)

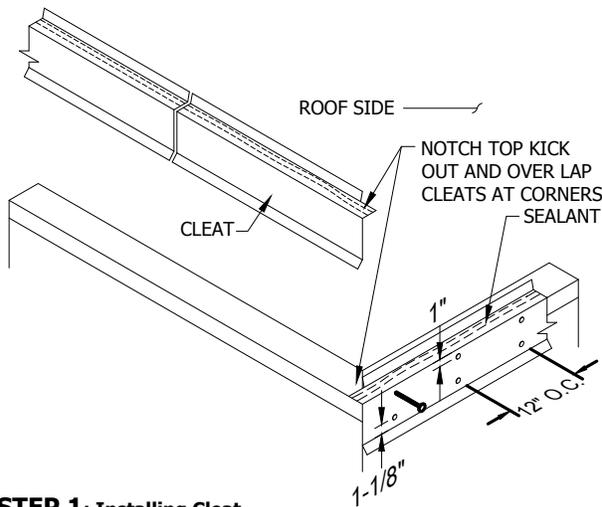


**STEP 1: Installing Cleat**


Apply a continuous bead of water-cut off mastic by others to the bottom side of the cleat. Install cleat working away from the corners. Attach the cleat using 1-1/2" SS ring shank nails at the locations shown above at 12" O.C. The lower row of fasteners are only required for face sizes > 6".

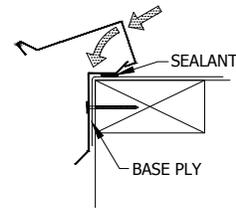

HOOK TOP ONTO CLEAT, ROTATE OVER, THEN PRESS DOWNWARD ON TOP FACE TO SNAP INTO POSITION  
FASCIA INSTALL

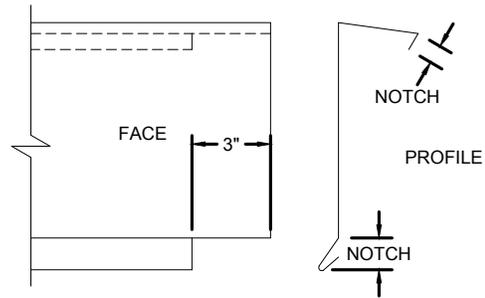

TYPICAL NOTCH PROCEDURE

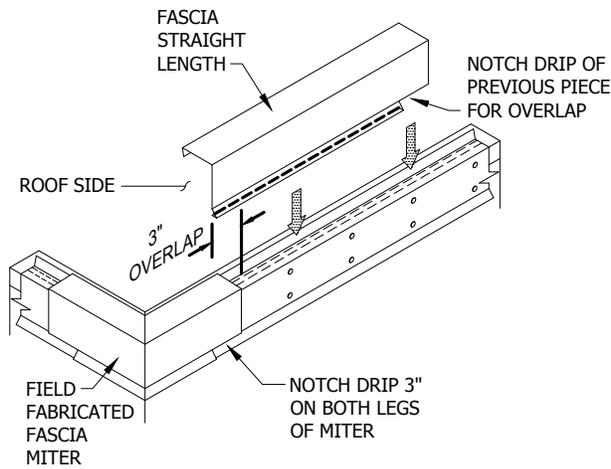

**STEP 2: Installing Fascia Straight Lengths**

Notch each drip of field fabricated miter 3". Then notch the drip of following 10'-0" piece as shown above. Install the fascia (see fascia install step). Review lengths of all straight pieces prior to cutting to avoid creating relatively short sections of fascia adjacent to full length sections.